

WAYS TO CONTROL TUNER



Telnet

Direct ASCII commands can be sent through raw TCP/IP interface over Ethernet or USB and used with any socket programming language or through any Telnet client program in any operating system.




MTUNE or ATS or IVCAD

Use Maury Microwave Software ATS or IVCAD to MTUNE or ATS or IVCAD to easily characterize and control your Tuner. All Software packages support all Maury Microwave tuner libraries.

T
I
P
S



Adjust tuner supports to provide alignment with mating devices.

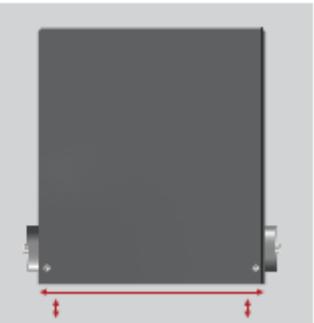

Tuner should be parallel to surface during operation.



Use connector caps when tuner is not in use or during transport.

For more and detailed information about the Millimeter Wave tuners, please review data sheets and manuals. (4T-050G05, MT977-315)

CONTACT US:

W / maurymw.com E / maury@maurymw.com
P / +1-909-987-4715 F / +1-909-987-1112
2900 Inland Empire Blvd, Ontario, CA 91764



Tuner Quick Start Guide



Unpacking tuner and what's inside box

- › Tuner
- › Controller
- › Power supply
- › USB cable
- › Ethernet cable
- › USB to Ethernet adapter
- › Manuals
- › Interface cable (DB15)
- › Foot and Bracket Kit



All items listed previously will be packed in the same box.



Once you open box, you will find the tuner, controller and accessories as shown.

Do not throw away the packaging, you will need it later to transport the tuner.

Getting to know the tuner


1. LCD/Main Display (Controller)
2. Reset button (Controller)
3. USB port (Controller)
4. Ethernet port (Controller)
5. Power supply port (Controller)
6. DB15 port (Tuner/Controller)
7. Connector caps (install when tuner is not in use or during shipping) (Tuner)
8. DUT Port Label
9. Interface cable (DB15)
10. Tuner connector



Tuner



Controller

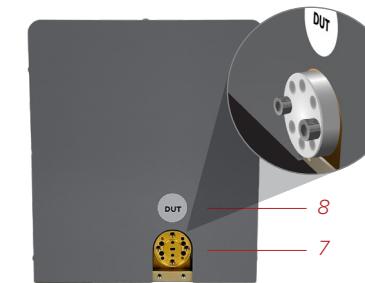

Repacking your tuner for shipping/transport



Place connector caps back
Note: Refer to manual for moving carriage and probe to shipping position (carriage and probe should be positioned half way between lower and upper limits).



Place foam inserts back as shown in image.




Make sure all items have been placed back into box.

USB Setup

Note: Only use USB or Ethernet, but not both at same time.

1. Connect tuner to controller using interface cable. Make sure cable is fully inserted as failure to do so can cause damage to tuner.
2. Plug in power supply to controller first (only use power supply that was supplied with tuner, failure to do so may result in damage and void warranty)
3. Connect USB cable between controller and computer
4. Turn ON power supply (If power supply does not have a switch, connect it to wall outlet)
5. Tuner will boot up at this time
6. Pop-up window to update USB driver if first time
7. Identify USB port number in Windows

Note: Please refer to MT977-315 user manual for more information.

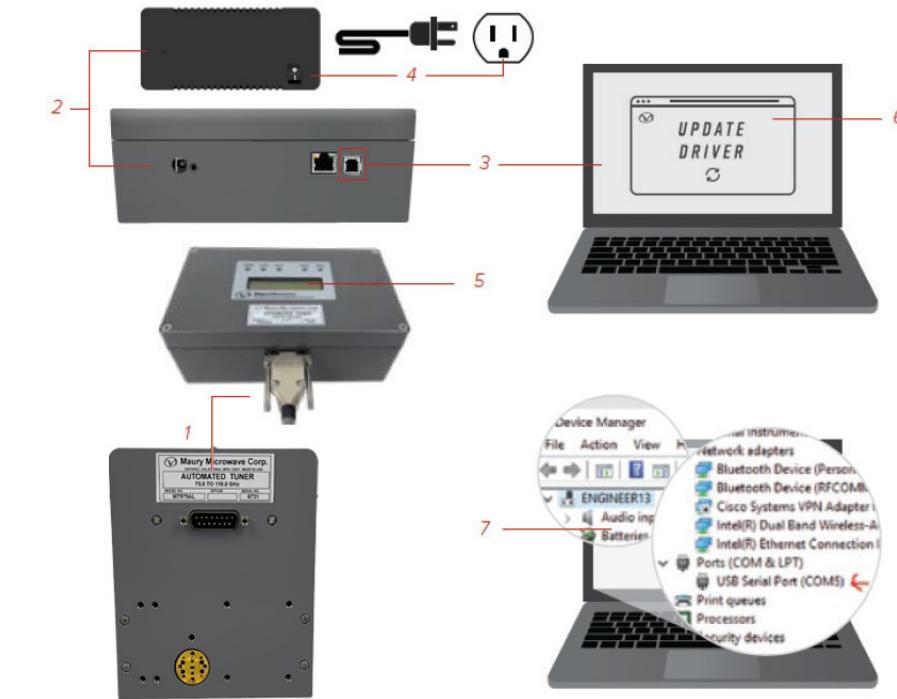

Ethernet Setup

Note: Only use USB or Ethernet, but not both at same time.

1. Connect tuner to controller using interface cable. Make sure cable is fully inserted as failure to do so can cause damage to tuner.
2. Plug in power supply to tuner first (only use power supply that was supplied with tuner, failure to do so may result in damage and void warranty)
3. Connect Ethernet cable between controller and computer
4. Turn ON power supply (If power supply does not have a switch, connect it to wall outlet).
5. Tuner will boot up at this time
6. Configure Ethernet card and IP address on computer

Note: Please refer to MT977-315 user manual for more information.

